



## ME117 SensingEdge


- Sectional Doors
- Scissor Lifts
- Conveyors • Presses

### About the ME117...

This pressure sensitive electric edge can be adapted to suit a wide variety of applications. When touch activated, the ME117 sends an immediate electrical signal to controls to stop and/or reverse operations. With appropriate mounting channel, this edge will fit nearly all doors from 1" to 2" thick. A variety of mounting channels are available for easy installation on machinery applications. The ME117 is resistant to flame, water, and most common greases and oils.



### Specifications

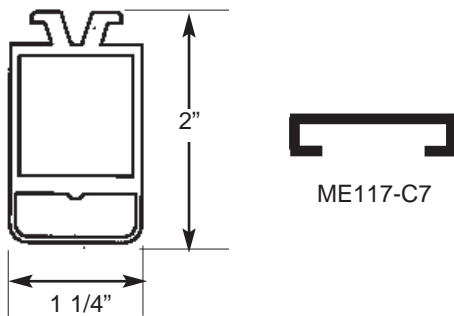

**Color:** Black

**Length:** Per specification to nearest 1/4"

**Sensitivity:** 4 psi - standard

**Lead Wire:** 2 ft. SJTO 18 gauge - standard  
Optional 22 gauge

**Wire Outlet Location:** specify right hand, left hand or end

**Electrical Requirements:** maximum 24 volts, 1/2 amp AC or DC power.

**Electrical Diagram:** 2 wire N.O. contact

**Contact Element:** Alumaglas®

**Mounting Channel:** ME117-C7

**Sensing Edge:** Extruded flexible PVC

**Temperature Range:** -30°F to +155°F

### Options

- Color: Caution yellow (ME117Y)
- 4 wire fail-safe configuration (highly recommended)
- Soft ends
- Coil Cord attached
- Retracting Reel
- 4 wire fail-safe Control Panel (MFSC-100)
- 4 wire fail-safe intrinsically safe Control Panel (FSIS-25-4)
- Air-Wave (MAW117) Pneumatic (MEP117)
- Mounting Channel Designs (see side 2)
- Left, Right, End, or Universal wire outlet

### Installation

Slide ME117 SensingEdge into proper channel. To attach mounting channel, place in desired location. Drill 1/8" holes through channel and into mounting surface. Secure with screws.

**Note:** For safe operation, use a maximum 24 volt, 1/2 amp AC or DC power. For detailed installation and wiring instructions, contact MillerEdge, Inc.

REV. 8-23-04

# SensingEdge



## Care of the ME117...

Minimal care is required for the ME117 since it is manufactured with only the most durable materials and the highest quality control standards. However, SensingEdges must be examined once per month for cuts or punctures which could damage internal components. With the SensingEdge attached and the door open place a 1" thick wood block on the floor in the door's path at approximately the center of the door. Activate the opener. The door opener must reverse and open the door when it comes in contact with the wood. If it does not, a qualified technician must adjust, repair, or replace the necessary parts. Check wiring to be sure connections are secure. Check reversing mechanism often to assure integrity of operations. When properly maintained, the ME117 offers years of trouble free operations.

## Warranty

We will replace within one year of shipment from our factory, any SensingEdge subject to normal use which is found to have defective materials or workmanship, as determined solely by our factory representative. Replacements will be shipped to you freight collect. This warrant is void where evidence of misuse or abuse is present.

## Notes

Contact MillerEdge to ensure compatability with your operating controls. U.S. Patent #4,396,814 Canadian Patent #1,048,066. Other Patents apply.

---

MILLER EDGE, INC. • P.O. Box 159 • West Grove, PA 19390 • (610)869-4422 • Fax: (610)869-4423 • 800-220-3343 • [www.milleredge.com](http://www.milleredge.com)  
MILLER EDGE, INC. • 6809 South Harl Avenue, Suite A, Tempe, AZ 85283 • (480)755-3565 • Fax (480)755-3558 • 800-887-3343