




MU22 SensingEdge

- Sectional Doors • Material Handling System • Aircraft Hangar Doors

About the MU22..

The MU22 pressure sensitive electric edge is custom manufactured to your exact specifications for length, width, height and sensitivity. When touched lightly or at an angle, the MU22 will send an immediate electrical signal to your controls to stop, and/or reverse operations. It is completely flexible and will contour curved surfaces. The MU style SensingEdge is extremely versatile--its profile can be square, rectangular or even angled. Contact us with your specifications and we will design the best SensingEdge for your application.

Specifications

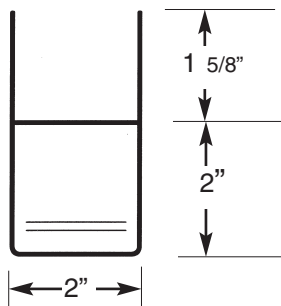

- Color:** Gray, yellow, black or white
- Length:** Per specification to the nearest 1/4"
- Sensitivity:** 3psi - standard
- Lead Wire:** 24" SJTO 18 gauge - standard
- Wire Outlet Location:** specify right hand, left hand, end or top
- Electrical Requirements:** 24 volts, 1/2 amp AC or DC power
- Electrical Diagram:** 2-wire, N.O. configuration
- Electrical Contact Element:** Alumaglas®
- Cover:** Heavy duty reinforced PVC
- Temperature Range:** -30°F to +155°F



Options

- 4 wire N.O. configuration
- Pneumatic (MUP22) Air-Wave (MUAW22)
- 4-wire control panel (MFSC-100)
- Yellow/Black striped outer cover material
- 4-wire intrinsically-safe control panel (FSIS-25-4)
- XR-5 chemically resistant cover for protection against:

kerosene	50% phosphoric acid
diesel fuel	50% hydrochloric acid
JP-4 jet fuel	50% acetic acid
salt water	SAE-30 oil

Installation

To install remove edge from shipping container and lay out flat and straight. Close air valve. Position edge in desired location and attach with screws through mounting flange at ends and center. Continue to attach edge by securing mounting flange with screws placed 24" apart. Do not place screws below seal line. For detailed installation & wiring instructions, contact MillerEdge, Inc.

Care of the MU22

Minimal care is required for MU style SensingEdges since they are manufactured with only the most durable materials and the highest quality control standards. However, SensingEdges should be examined regularly for cuts or punctures which could damage internal components. Also check wiring to be sure connections are secure. When properly maintained, the MU22 offers years of trouble-free operation.

SensingEdge



Warranty

We will replace within one year of shipment from our factory, any SensingEdge subject to normal use which is found to have defective materials or workmanship, as determined solely by our factory representative. Replacements will be shipped to you freight collect. This warranty is void where evidence of misuse or abuse is present.

Notes